



Olympus D590 Face Plate Replacement

Written By: Katie



INTRODUCTION


Removal of the front plate to get into the logic board, lens, etc.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Face Plate

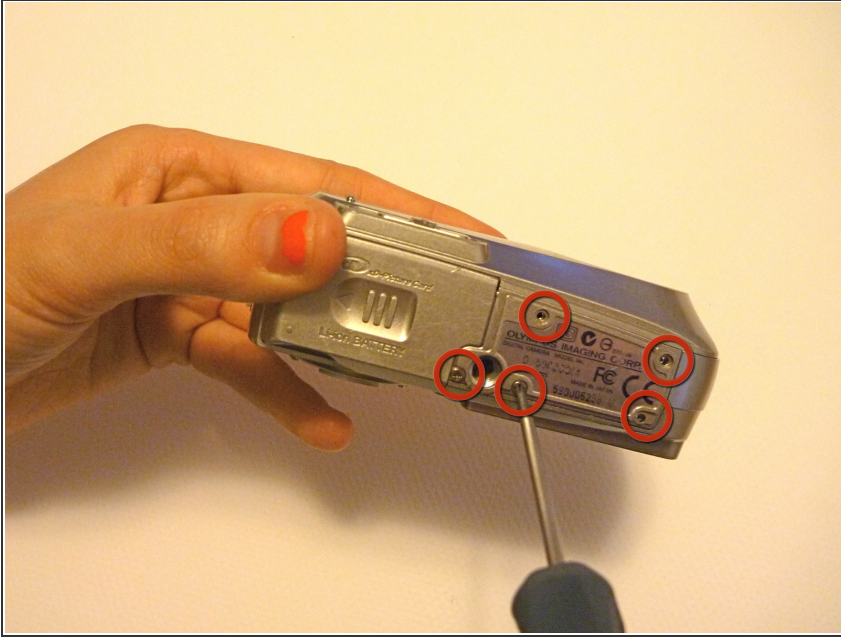


- Flip camera so you are looking at the bottom.
- Unscrew all 5 base plate screws.

Step 2




- Lift open retainer clip by sliding the clip to the left and letting the clip pop up.

Step 3

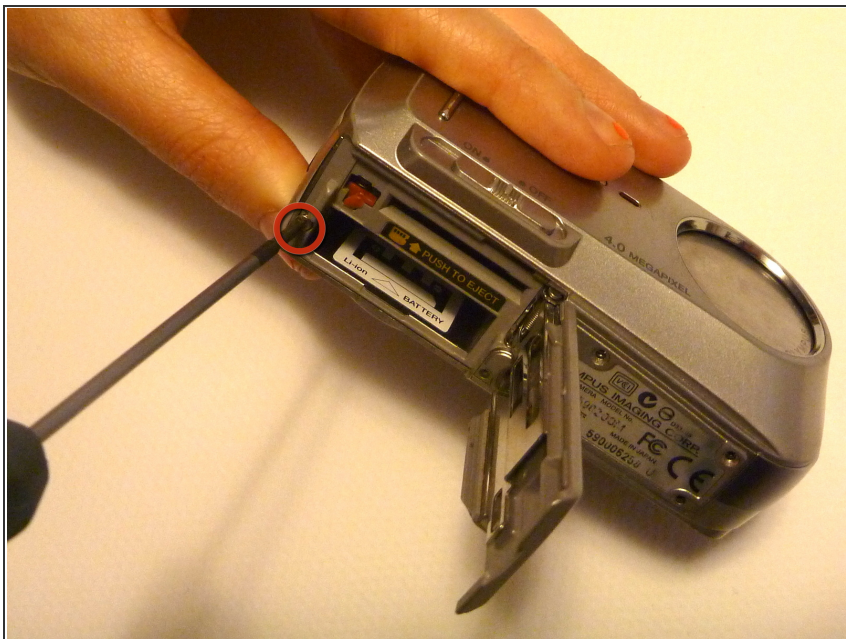

- Unscrew 1 screw located next to the battery slot.

Step 4

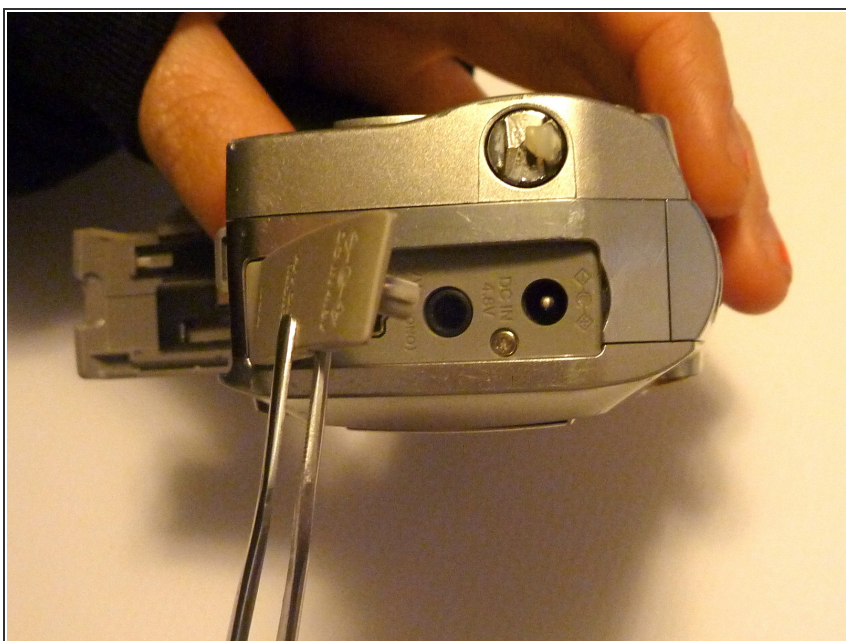


- Turn the camera so the USB, AV and DC in/out rubber plate it facing you.
- Lift the rubber plate exposing the ports beneath.

Step 5




- Unscrew the 2 screws next to the USB and AC ports.

Step 6

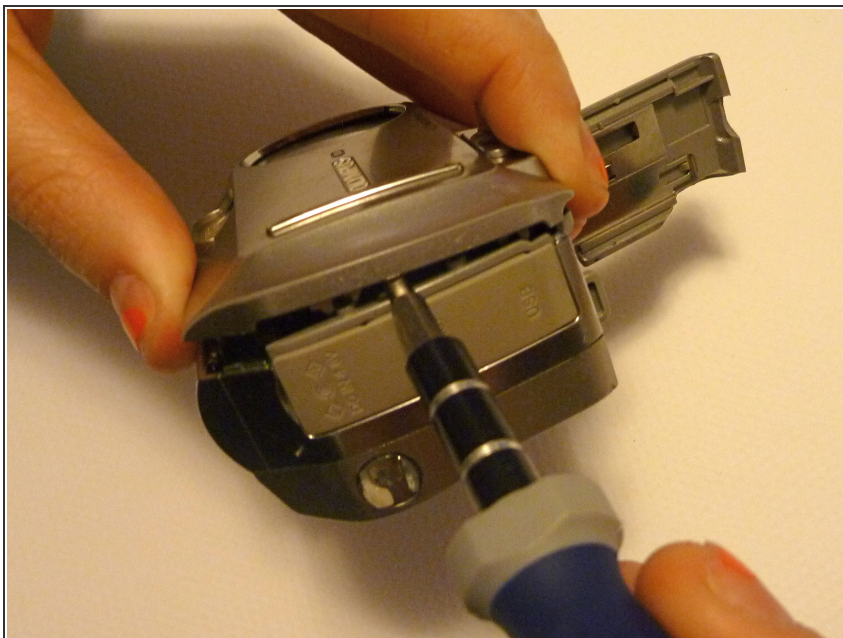

- Use a flathead screwdriver or another flat opening tool to pry the faceplate from the whole device.

Step 7

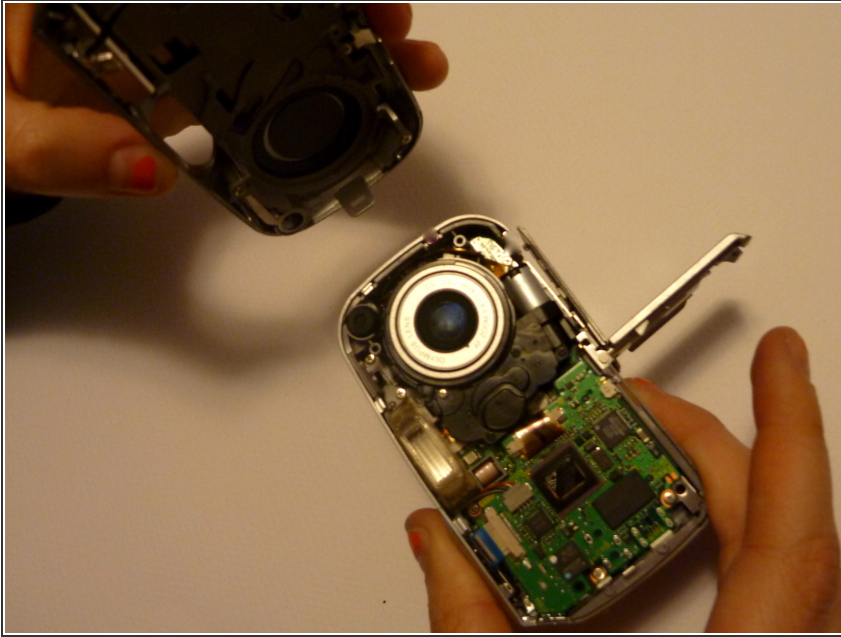

- Pull off the faceplate revealing the inside of the camera.
- Be careful because there is a connector that goes from the faceplate to the motherboard and if that line disconnects the camera will not power on through the on and off switch anymore.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-01 03:08:27 AM.